

maier® GUARANTEE OF MHI-350

※ Article	Innovative lint shaver	Date of Purchase	DMY
		Period of Guarantee	One year from the date of purchase
※ Customer	Add. & Tel		
	Name		
※ Store	Name of the store & its add.		

1) All products of **maier® MHI-350** pass the strict tests prior to leaving factory. Customers could, within one year from the date of purchase, enjoy free repair or replacement of parts against presentation of this guarantee if it is attested by our company that malfunction or damage to the device and/or parts occurs under normal running condition.

2) The guarantee does not cover the damages that are attributable to self dismantling and assembling, unauthorized operation not found in the instruction, random change of power source and/or voltage, artificial causes and natural disaster.

3) Date (s) on this guarantee and the purchase invoice is the evidence of one year free maintenance.

INNOVATIVE LINT SHAVER

USER MANUAL



Special features

- After some period of use almost all fabrics will become full of lint, fuzz and pills caused by fiction and pulled threads. They make your garments look old and difficult to clean. **maier®** Electric Fabric Shaver can shave off these fuzz, threads and pills easily.
- Even your favorite old garment may be revitalized to regain their new look forever.

How to operate

- When battery power is use: Handle both side of the fuzz bin at the bottom and slide it out. Open the cover of battery compartment upwards and install 4x#C batteries and close cover. Slide in the fuzz bin properly.
- Place the fabric you wish to renew on a flat surface, hold the device by its handle and gently move it over the fabric. Do not press heavily to prevent damage to the fabric.
- Pull the fabric as straight as possible to increase the efficiency of the device and the result of fabric repair.
- When the efficiency of the device become low, open the screen cover anti-clockwise the carefully take out the cutting blade, then clean the blade and inner compartment of the device using a soft brush. Reinstall the blade and screen cover properly then restart.
- This device is equipped with safety apparatus to stop the operation when the screen cover is loose or open.
- Remove the batteries from their compartments in case the device is not being use for long period of time to prevent damage caused by battery leakage.

Specification

Model	Rated Voltage	Power Consumption	Rotate Speed	Dimensions	Weight
MHI-350	DC 6V	5W 4C# DryBatteries	7000R/Min	195x75x150 (mm)	455g

Caution

- This device is equipped with sharp cutting blade, do not use it to shave your hair or skin to prevent cut and damage to your skin.
- Please tuck in exposed thread before you shave your woolen sweater or other fabrics to prevent damage to the fabrics.
- When the result of fabric regeneration cannot be pre-determined, you should shave the hidden or unexposed area first to determine the result before you shave the entire fabric.
- Do not use this device to shave easily damaged fabric like Angolan Fabric. Intricate design or pattern on some fabrics may disappear during the process of shaving.
- Use only damp cloth to clean the surface, do not allow water or other liquid to enter the inner part of the device.

COMPONENTS IDENTIFICATION



Figure 1

Figure 2